HOME
DECORATORS
COLLECTION

BF-25391 BUFFORD MIRROR 30"Hx24"W

INV#28262

ASSEMBLY INSTRUCTIONS

Made In China

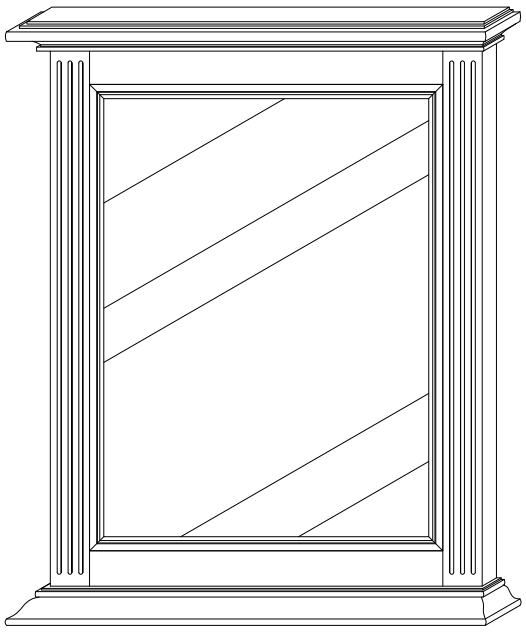

Thank you for purchasing this quality product. Be sure to check all packing materrial carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 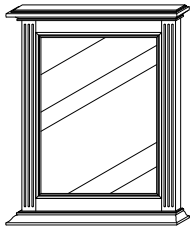 MIRROR-1PC	B  LONG SHEETIRON-1PC	C  SHORT SHEETIRONS-2PCS
D  GECKOS-6PCS	E 7mm× 7/8"  SCREWS-6PCS	F 7mm× 5/8"  SCREWS-4PCS
G EVA PADS-2PCS		

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

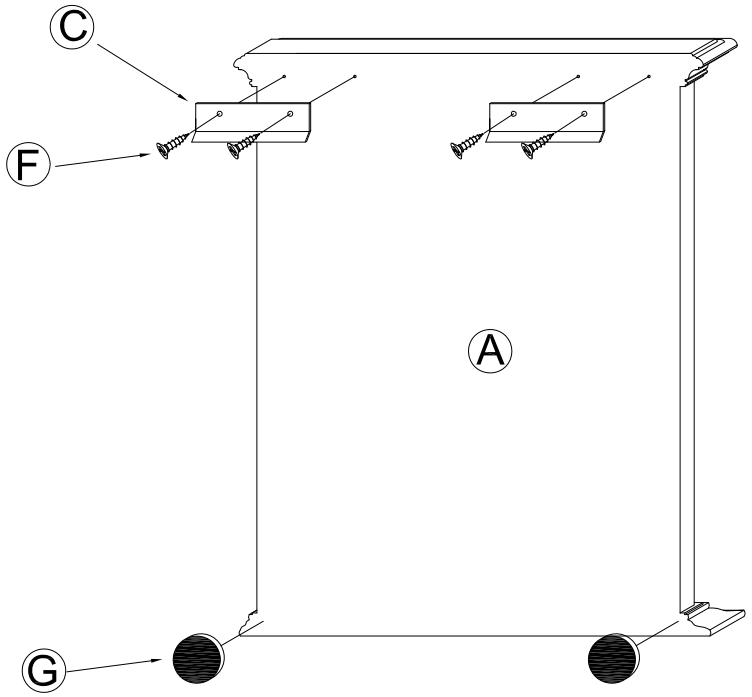

1). ASSEMBLE THE MIRROR(A).

- ATTACH THE SHORT SHEETIRONS(C) TO MIRROR(A) USING 4 SCREWS(F).
- ATTACH THE EVA PADS(G) TO MIRROR(A).

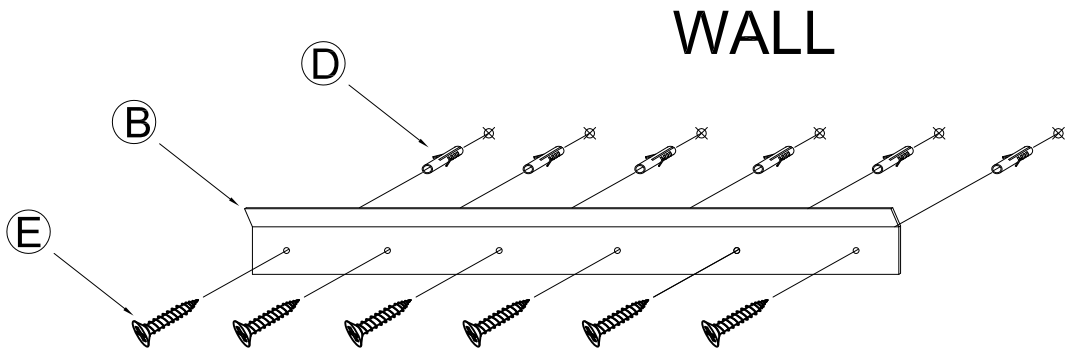



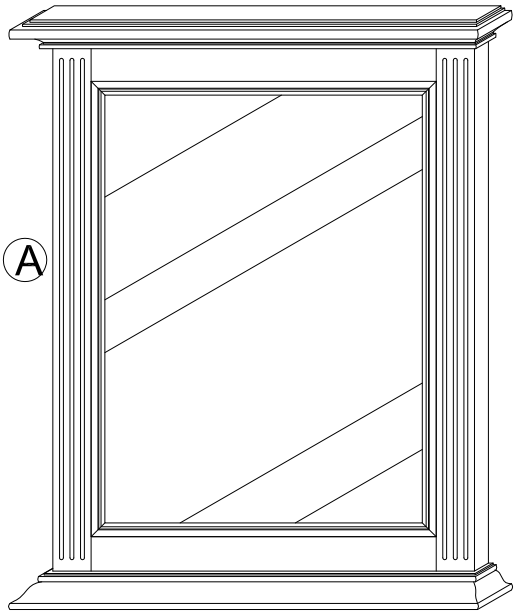

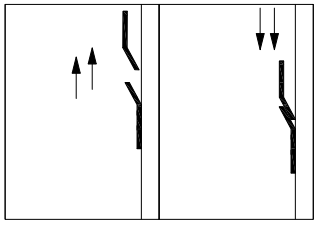

2). ASSEMBLE THE SHEETIRON(B).

- DRILL 6 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL'S HOLE DISTANCE AND HEIGHT.
- TAP 6 GECKOS(D) INTO THE HOLES ON THE WALL. THEN ROTATE 6 SCREWS(E) INTO THE GECKOS(D).
- HANG THE MIRROR(A) ONTO THE SHEETIRON(B).